

FWF CARTRIDGE REPLACEMENT

After three months of typical operation, it is time to change the Fresh Water Filter cartridge. This procedure will instruct you on how to do this.

CARTRIDGE REPLACEMENT

1. With your Watermaker system off, locate the Fresh Water Flush unit.
2. Locate the valve on the Fresh Water Flush unit and turn the valve to the off position.
3. Using your hand or the supplied cartridge wrench, remove the housing by turning clockwise when looking down at the unit.
4. Replace the cartridge.
5. Before proceeding, check the o-ring on the housing and replace/lube o-ring as needed.
6. Using hand only, reinstall the housing by turning counter-clockwise until secured.
7. Locate the valve on the Fresh Water Flush unit and turn the valve to the on position.
8. Proceed to complete a fresh water flush and check for any leaks around the housing.

WARNINGS

- Do not attempt to clean the cartridge.
- Do not overtighten the housing when reinstalling.
- Use of non-FCI cartridges will cause system damage.

**FOR EASIER APPLICATION, VIEW
THIS INSTRUCTIONAL VIDEO.**



FAQS

Q: Why do you need to change the Fresh Water Flush Cartridge?

A: The Fresh Water Flush system prevents chlorine and particles from reaching the membranes and potentially causing damage.

Q: Can you clean the Fresh Water Flush Cartridge?

A: No, the FWF cartridge is single-use only and should be replaced when needed.

Q: How often should you replace the Fresh Water Flush Cartridge?

A: If you have a V4 Control System, the system will inform you when the cartridge should be changed. On all other systems, we recommend replacement every 3 months.

REPLACEMENT PARTS

20-4172 — FWF Filter Cartridge (Aqualite)

20-0025 — FWF Filter Cartridge
(Aquamiser+, MaxQ+, Atlas+)

23-4316 — O-Ring FWF Housing
(Aquamiser+, MaxQ+, Atlas+)

04/28/2020
5.4, Rev A